1 Open the packaging, tear along the perforation to access an individual kit

2 Snap along scored line to open the individual kit

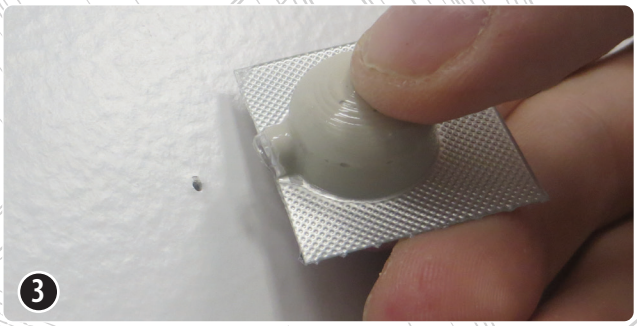

3 Position pod near the damage and gently squeeze the pod

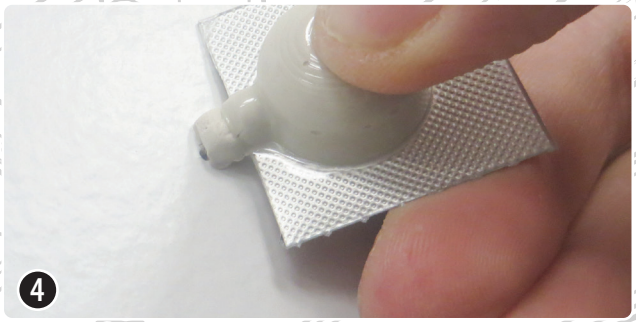

4 Apply spackle to hole to fill and cover damage

5 Using the flat side of the smoother, evenly spread the spackle to repair hole

6 Spackle may need up to three minutes to dry out

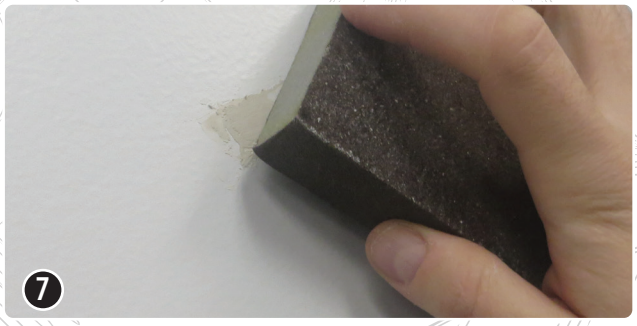

7 Once completely dry, use a sander to smooth any imperfections

8 Apply fresh paint to complete job